


BUTTON TYPE:
 SW 1 und SW 2: Edge switch!!!

* optional:
 Bypass for Bulb < 20W!

Two-way switch
 without N and „O“ <20W

Shelly 1L

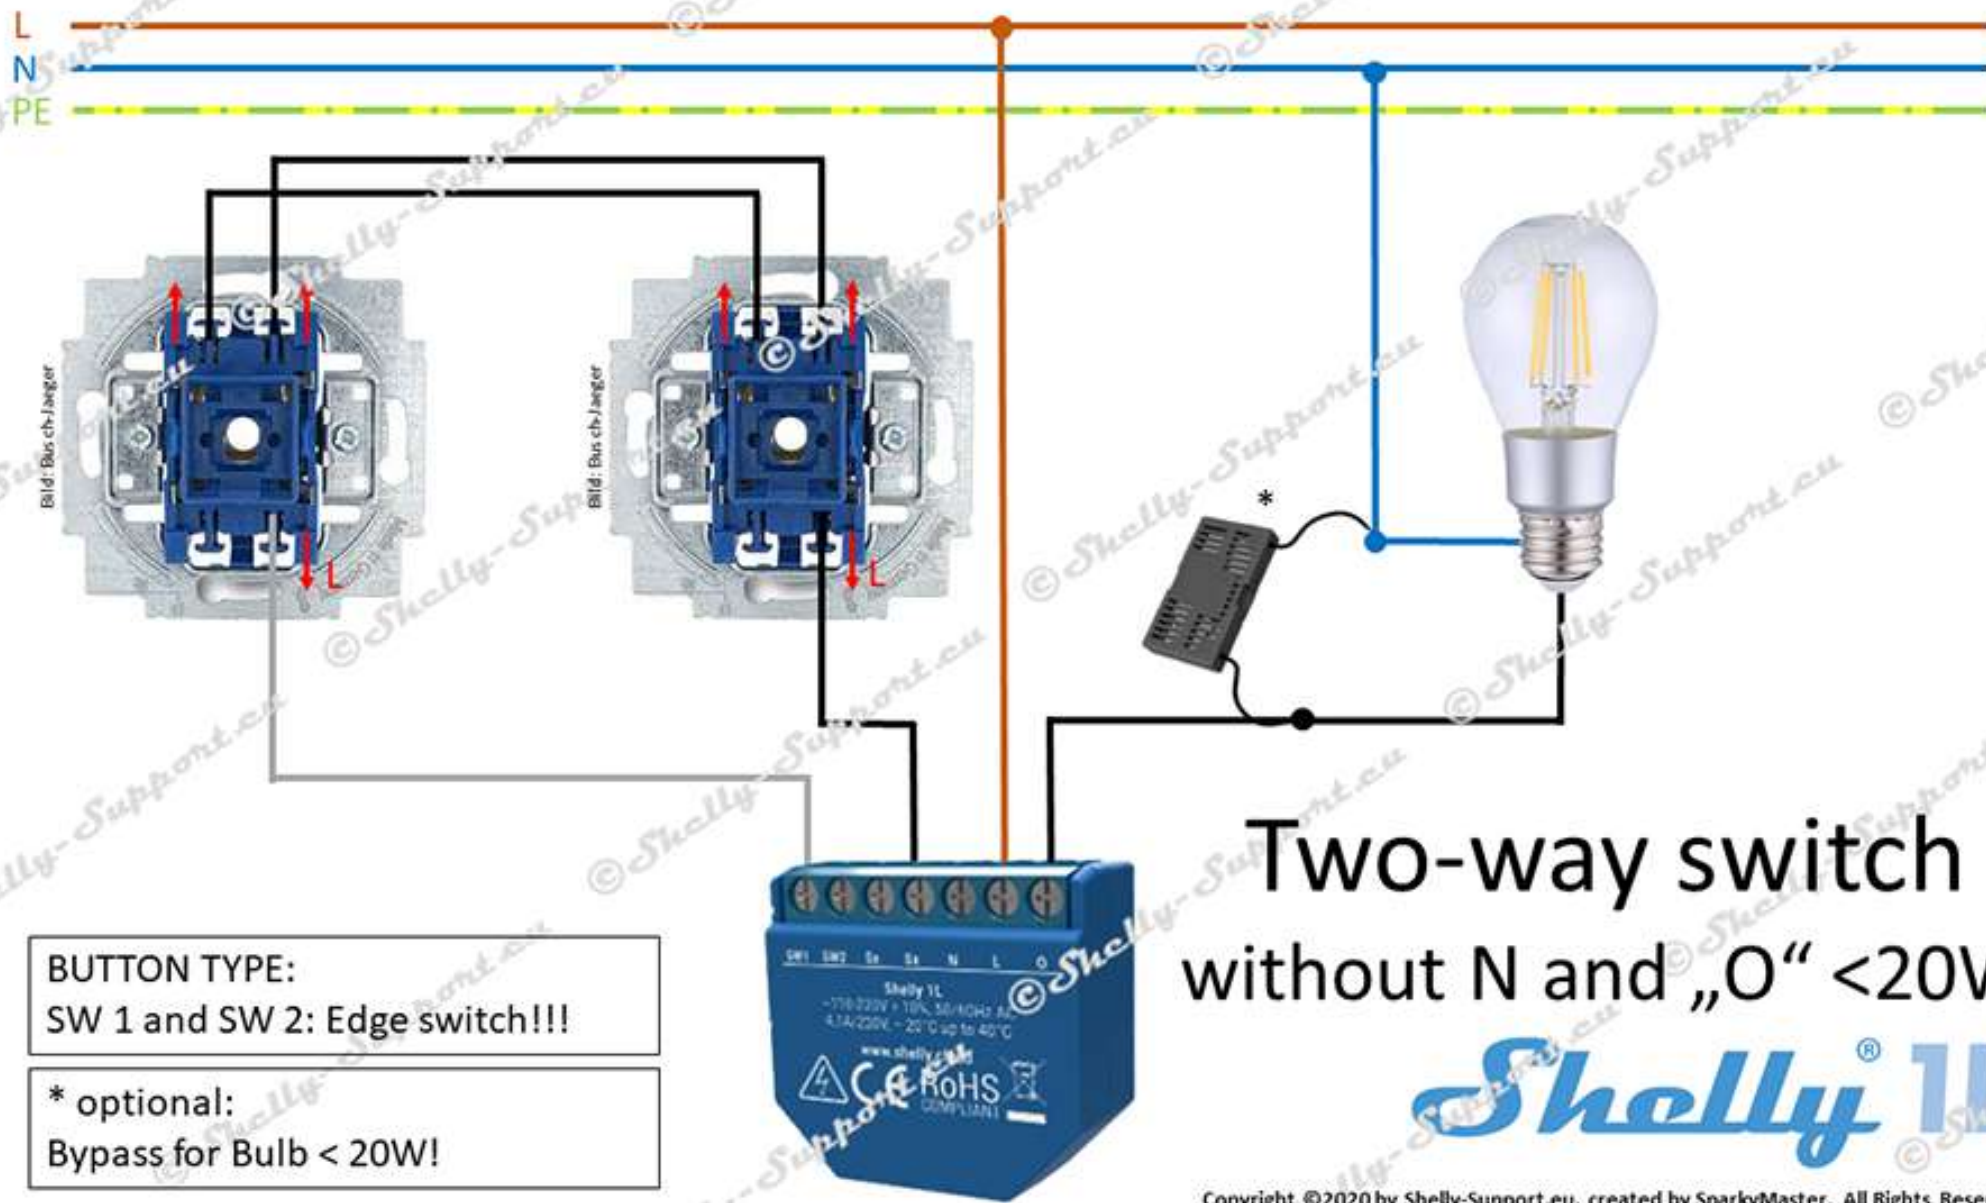


BUTTON TYPE:
SW 1 and SW 2: Edge switch!!!

* optional:
Bypass for Bulb < 20W!

Two-way switch
without N and „O“ <20W

Shelly 1L

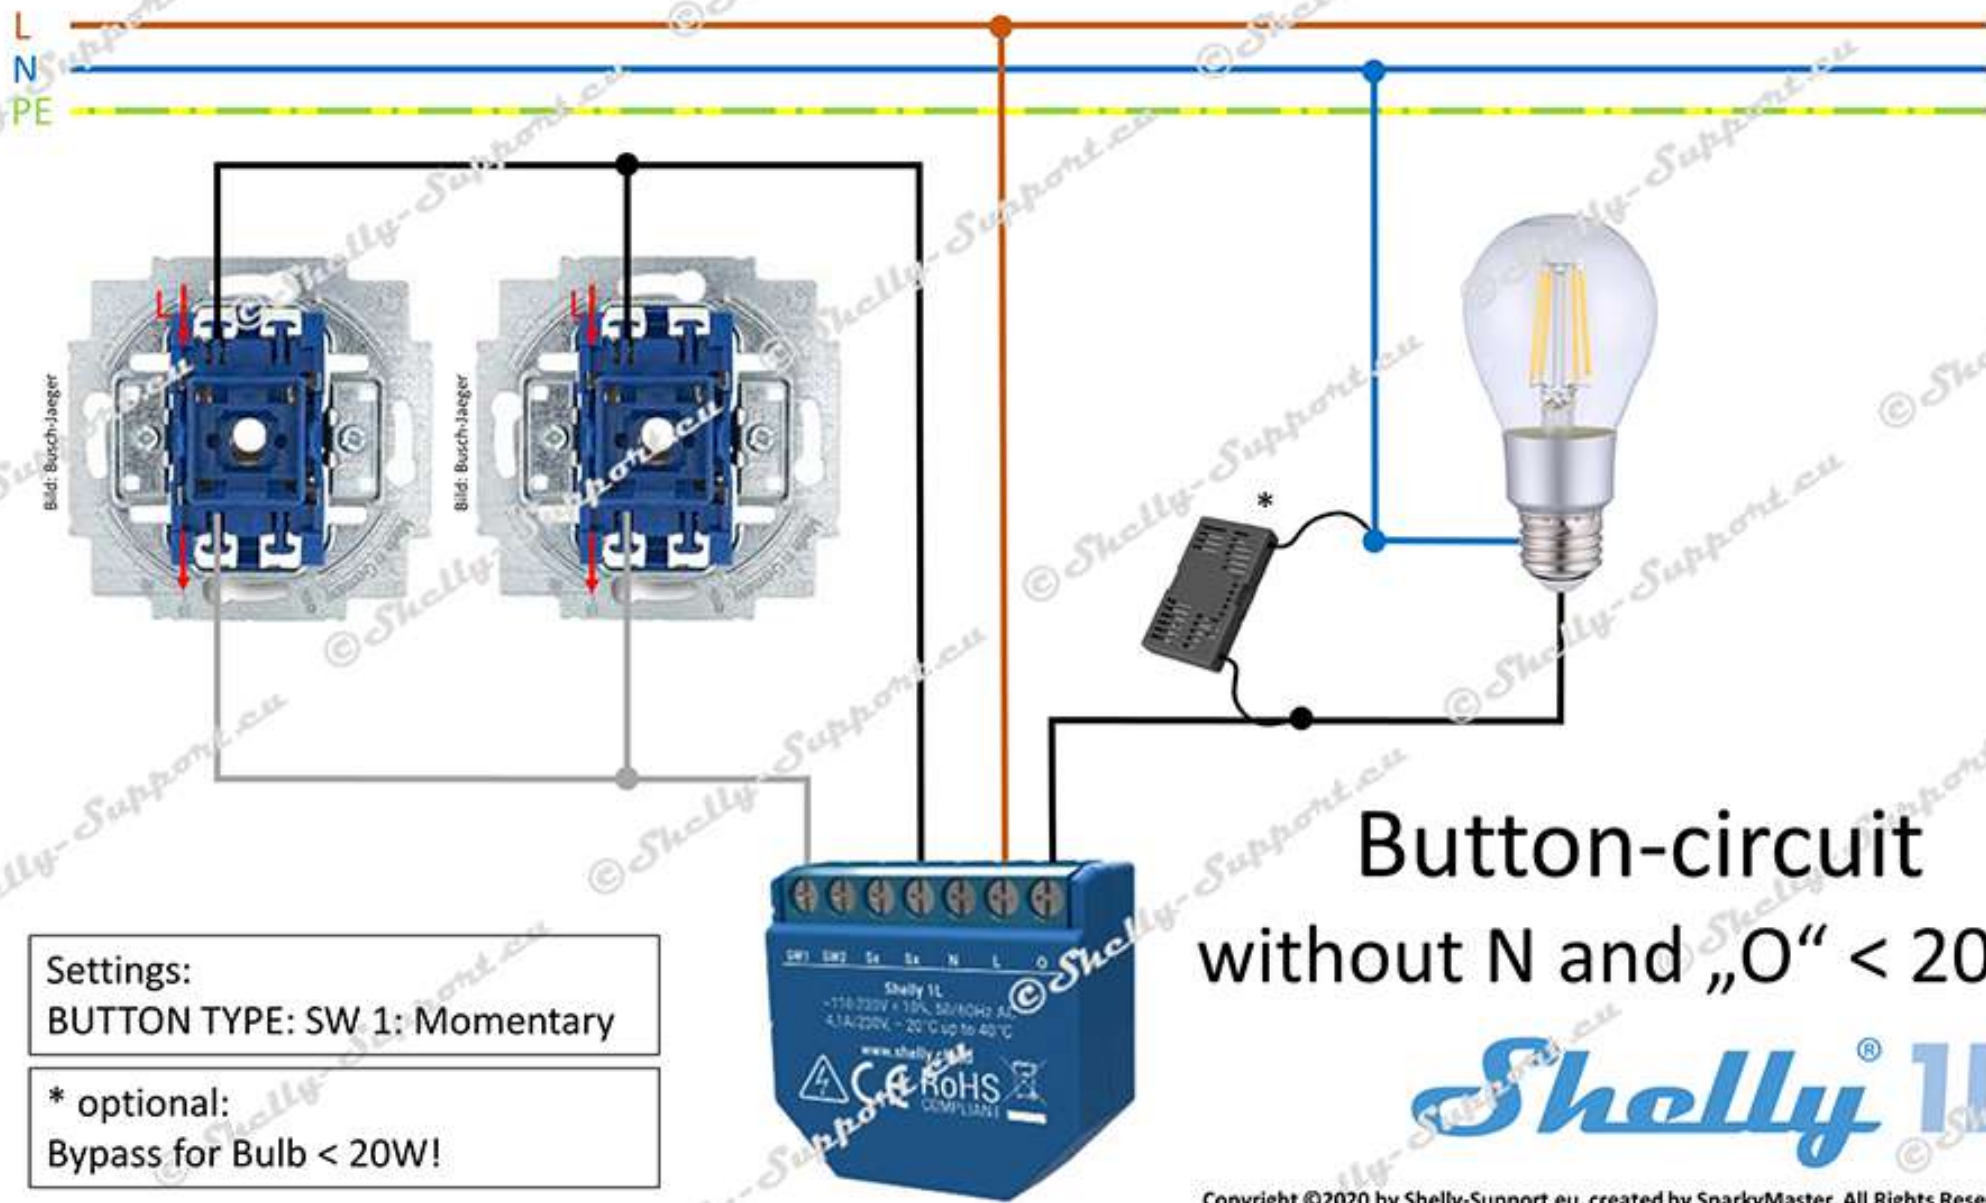



Button-circuit without N and „O“ < 20W



Copyright ©2020 by Shelly-Support.eu, created by SparkyMaster, All Rights Reserved

Settings:
 BUTTON TYPE: SW 1: Momentary

* optional:
 Bypass for Bulb < 20W!

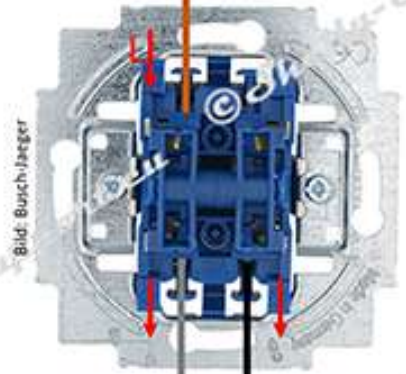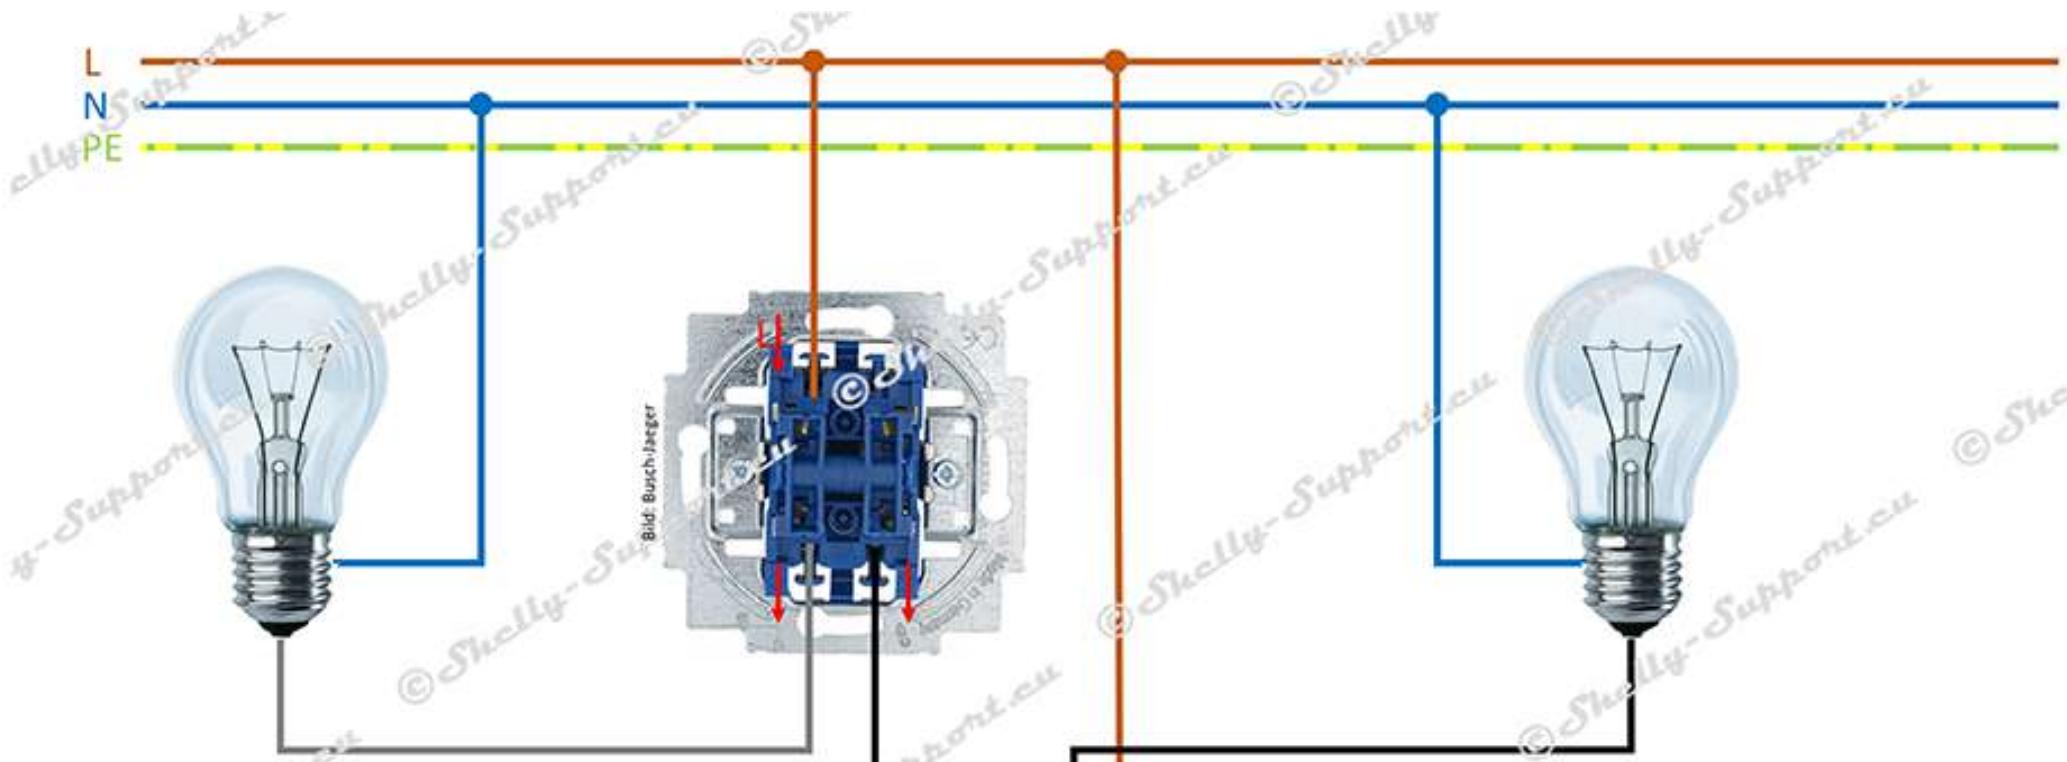

Speciality:

- Phase L to Output O
- Bulb to terminal L



Series connection without Neutral (N)

